




Canon AE-1 Film Rewind Crank Replacement

It is possible after use or damage that the film rewind crank could become damaged or broken. This guide will give you the steps needed to replace the film rewind crank.

Written By: Ben Barber

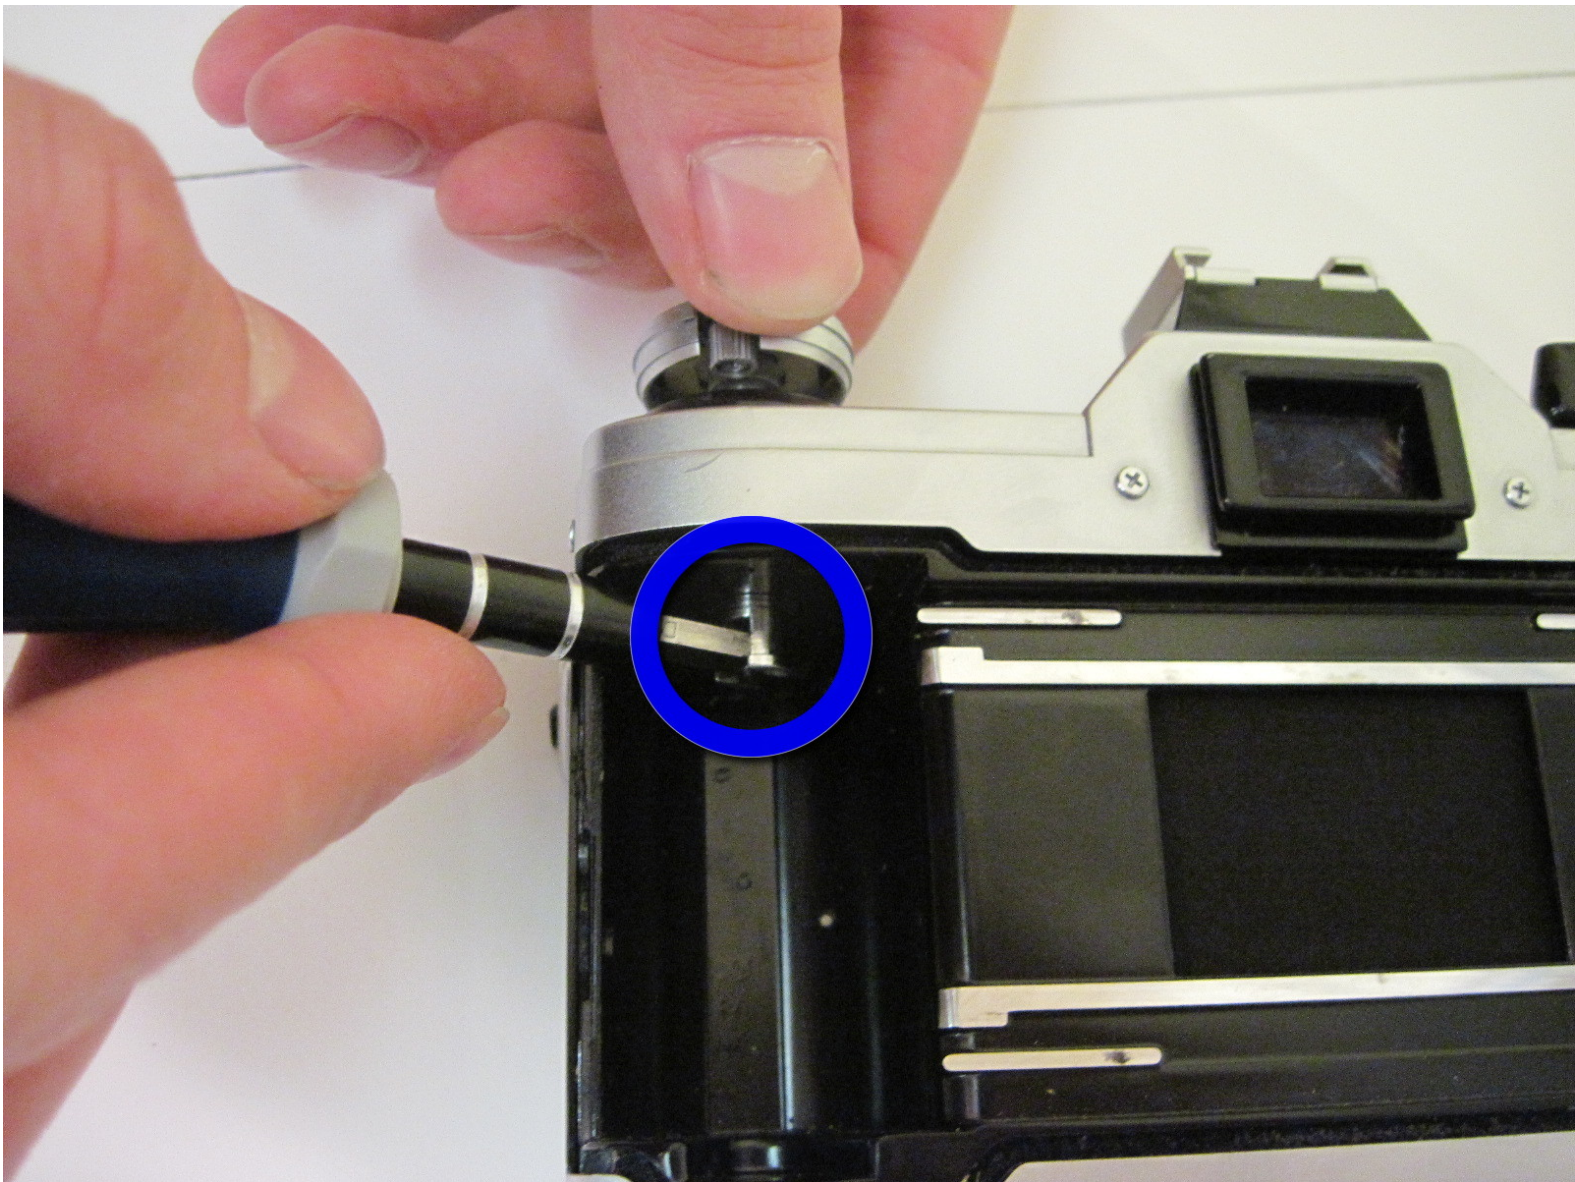



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)



PARTS:


- [Replacement film rewind crank](#) (1)

Step 1 — Film Rewind Crank

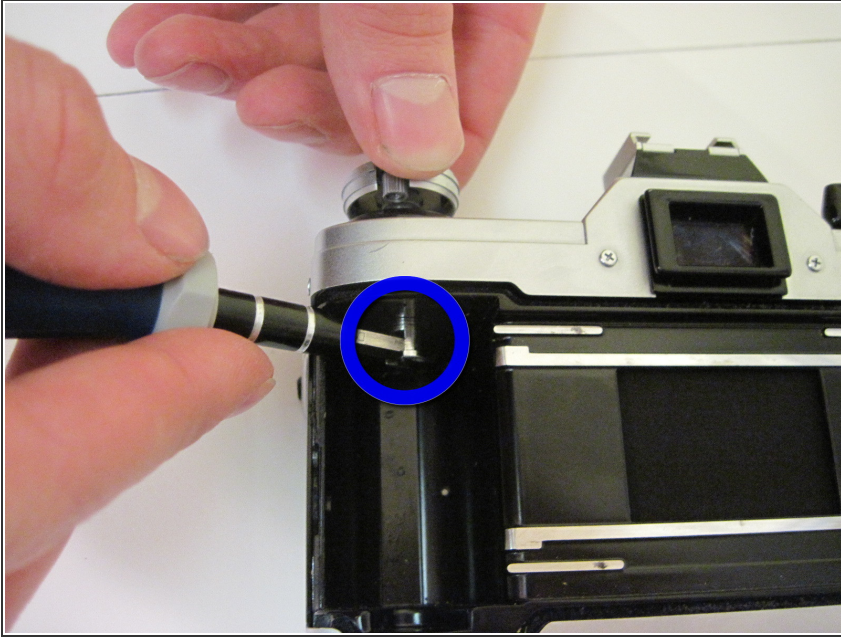



- Open film door
- Place screwdriver in slot as shown

Step 2

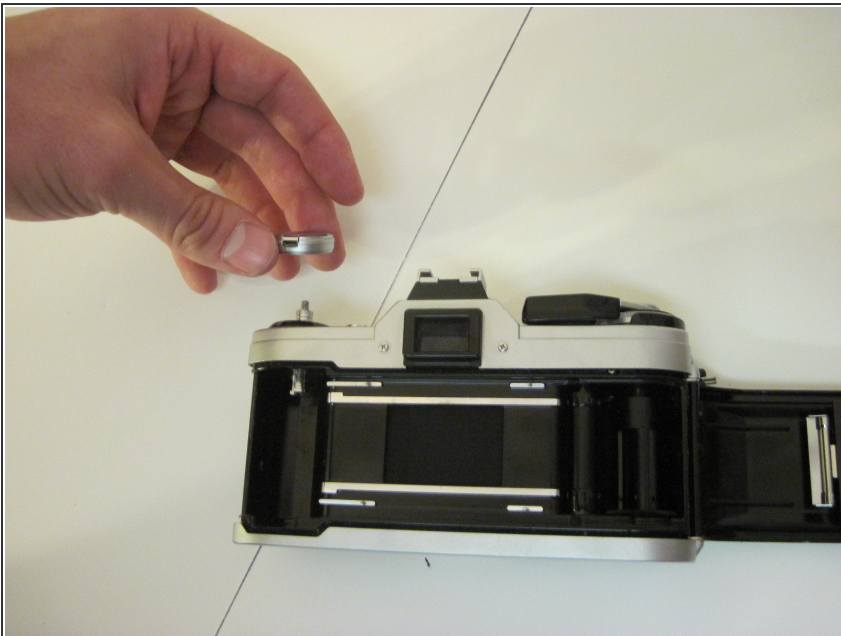


- Use screwdriver to prevent shaft from turning
- Rotate crank counter clockwise to remove crank

Step 3

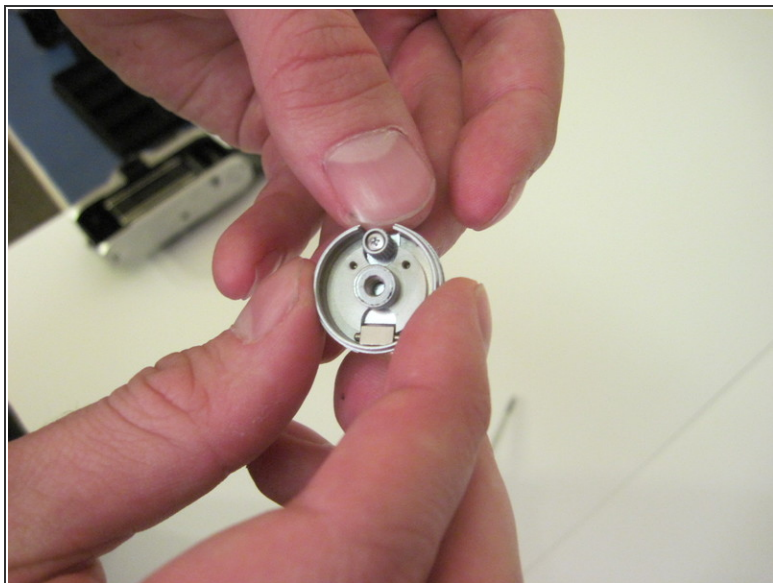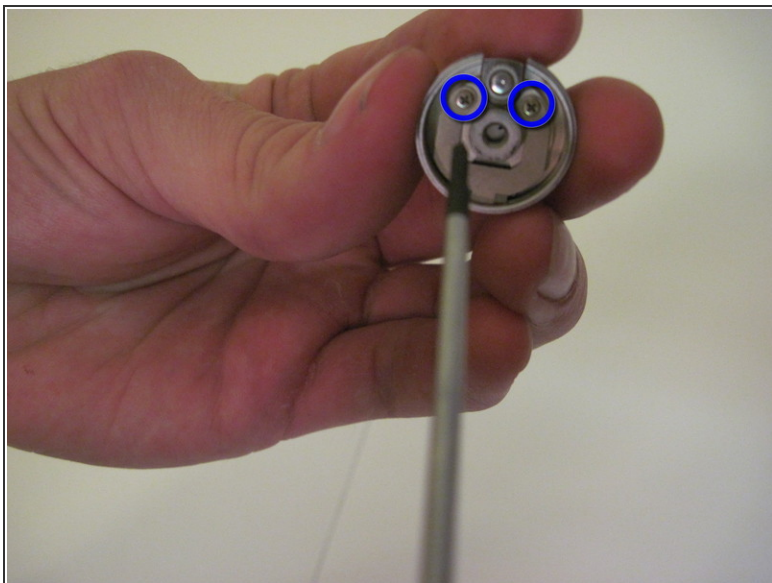

- Remove the two screws
- Remove silver pate

Step 4

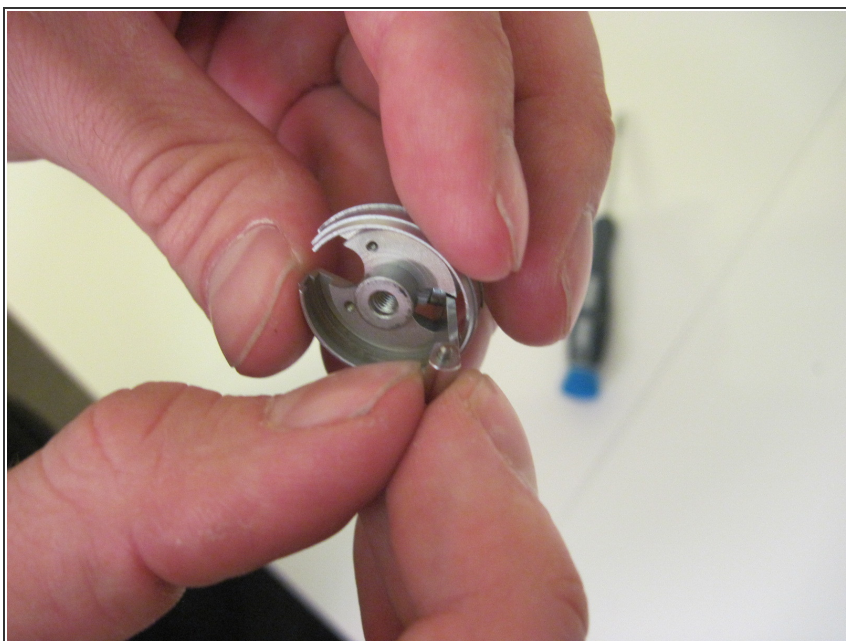

- Remove film rewind crank

To reassemble your device, follow these instructions in reverse order.

